CAN DI Self test


Please confirm the connection among OBD interface, candi main cable, GM and power is correct. When test candi, you must provide power from OBD connector, please refer to the following picture.







email: support@chinaobd2.com

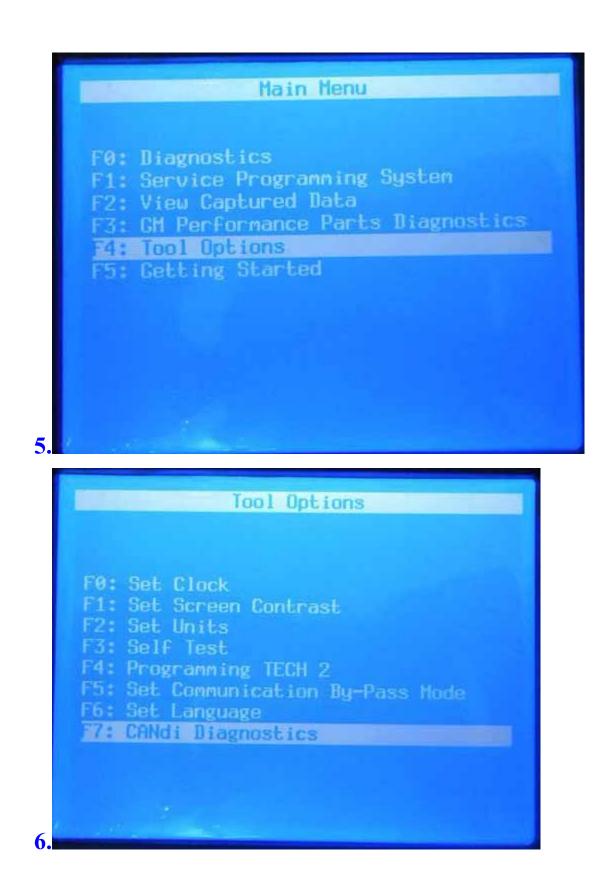

	V	ersion	1.00	
TO. 000	T. Dooul			
F1: Sel	F Resul	0.5		

Test Complete	ults Test stat
CANdi Present	Pa
Boot S/W Revision	1.
App. S/W Revision	4.
Hardware Revision	
CANdi RAM	Pa
CANdi Boot	Pa
UART Data Link	Pa

CANdi Diagnost	ics
Version 1.	
F0: POST Results	
F1: Self Test	
9.	
	Distant in the
CANdi Self Test	Test status
Test Complete	lear argena
CANdi Present	Pass
Boot S/W Revision	1.60
App. S/W Revision	4.50
Hardware Revision	1.00
CANdi RAM	Pass
CANdi Boot	
CANdi Resident	
CANdi Application	

CANdi Application Low Speed Data Link Med. Spd. Data Link High Speed Data Link

10.

Mark: there are two kinds of CANDI self test, please

refer to the picture NO.8 and NO.10.